

STROBE CIRCUIT/LOADING TABLE

STROBE TYPE	TYPE	75°C	CURRENT PER	CIRCUIT
		AMPS (A)	AMPS	LENGTH (FT)
QUANTITIES OF STROBES PER CIRCUIT	STR-A	6	0.48	300
	STR-B	7	0.56	290
GRAND TOTAL			1.04	590



SPEAKER CIRCUIT/LOADING TABLE

SPEAKER TAP/NO. SETTING	(WATTS)	1/2	TOTAL POWER (WATTS)	CIRCUIT LENGTH (FT)
QUANTITIES OF SPEAKERS PER CIRCUIT	SPKR-A	1/2	1/2	150

HORN CIRCUIT/LOADING TABLE

HORN NO. SETTING	(AMPS)	0.6	CURRENT PER CIRCUIT (AMPS)	CIRCUIT LENGTH (FT)
QUANTITIES OF HORNS PER CIRCUIT	HRN-A	3	1.8	300
	HRN-B	2	1.2	270

5 WTC STANDBY GENERATOR BULKHEAD FIRE ALARM AND SECURITY SYSTEM

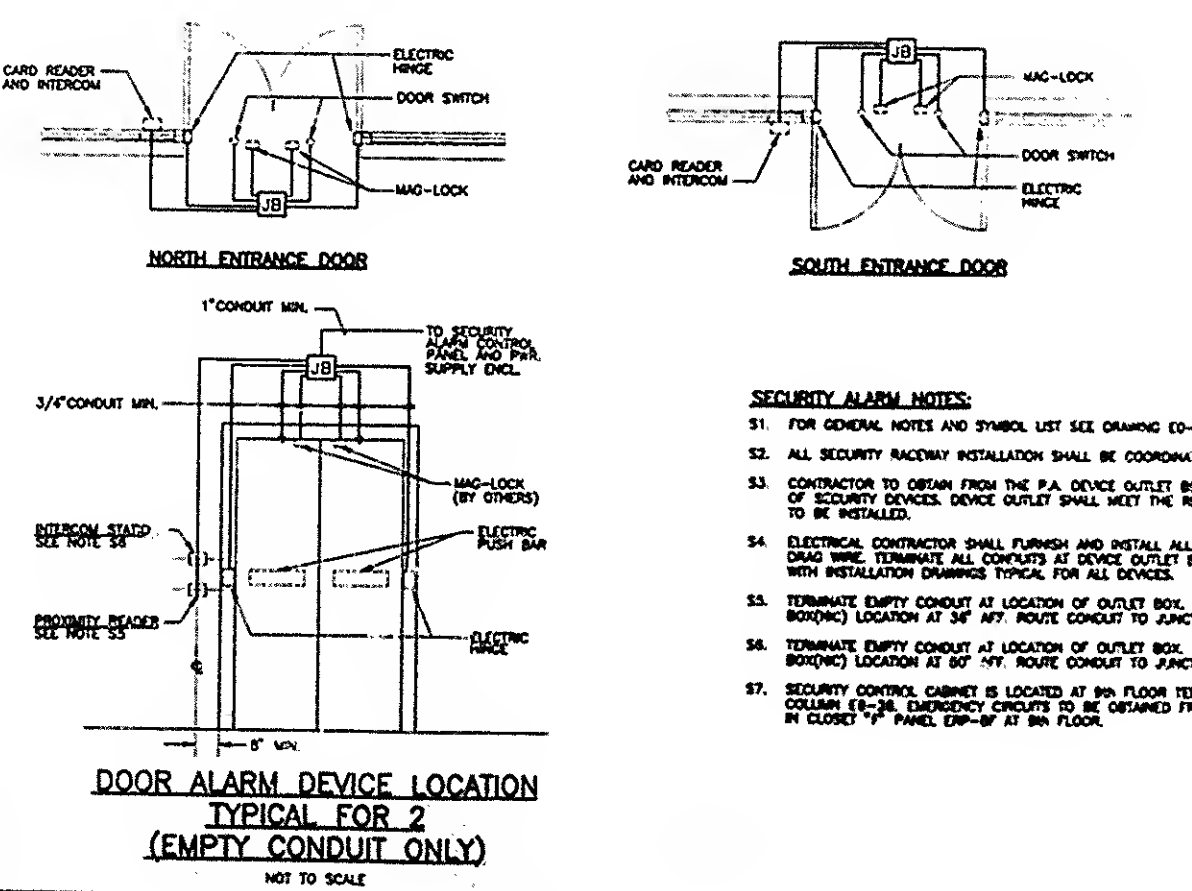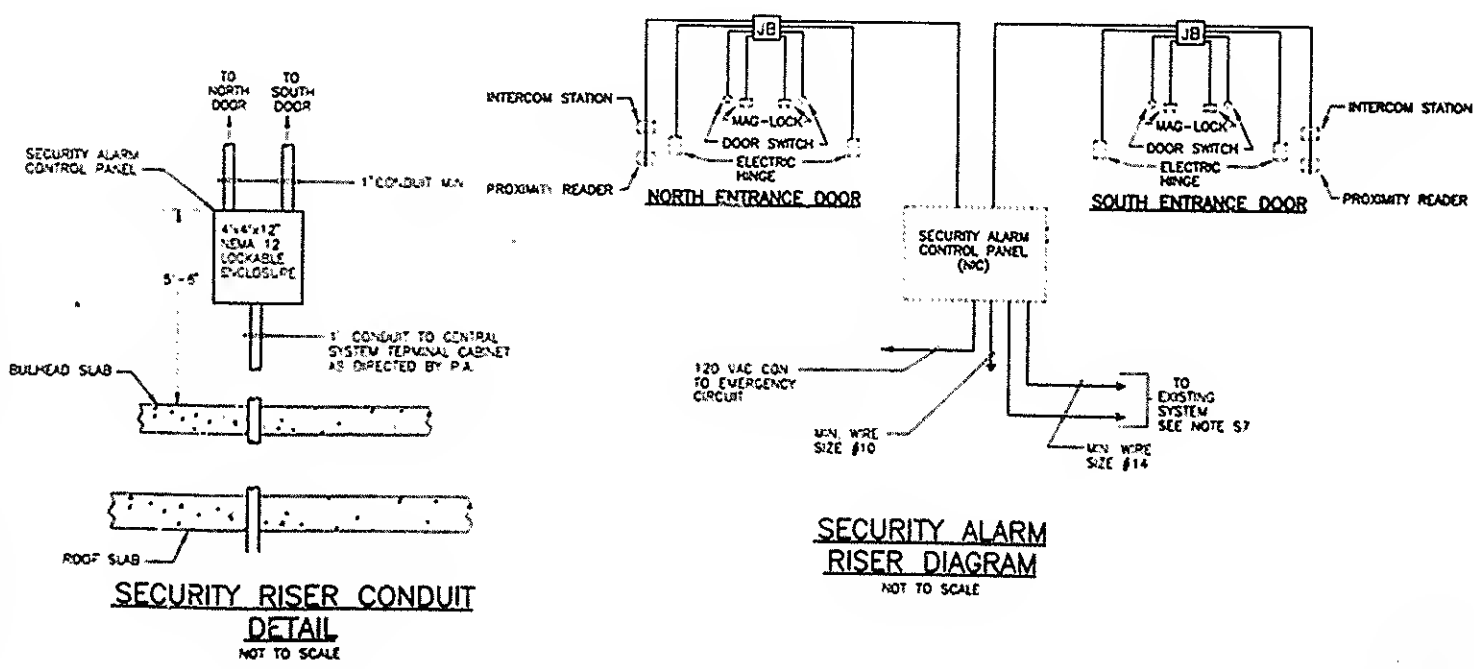

- SECURITY ALARM NOTES:**
- FOR GENERAL NOTES AND SYMBOL LIST SEE DRAWING E0-01.
 - ALL SECURITY RACKWAY INSTALLATION SHALL BE COORDINATED WITH THE CONTRACTOR TO OBTAIN FROM THE P.A. DEVICE OUTLET BOXES FOR THE SECURITY DEVICES. DEVICE OUTLET SHALL MEET THE REQUIREMENTS OF THE P.A. DEVICE OUTLET BOXES.
 - ELECTRICAL CONTRACTOR SHALL FURNISH AND INSTALL ALL EMPTY DRAG WIRE. TERMINATE ALL CIRCUITS AT DEVICE OUTLET BOXES. COORDINATE WITH INSTALLATION DRAWINGS TYPICAL FOR ALL DEVICES.
 - TERMINATE EMPTY CONDUIT AT LOCATION OF OUTLET BOX. PROXIMITY READER (NOC) LOCATION AT 34\"/>